LD620D

Unified Label Utility-II Manual
Technical Reference

■ Table of Contents

1. Foreword 3

2. Operating System Environment 4

3. Usage Preparation 4

4. Unified Label Utility-II Usage 5
4-1 User Setting Manager.....5
4-2 Configure Print Quality.....11
4-3 Manual Calibration.....12
4-4 PCX File Downloader 13
4-5 File Transfer.....15
4-6 Printer Tools.....16
4-7 Communication Window.....17
4-8 SLCS Test Tool 18

1. Foreword

The Unified Label Utility-II can be used for various purposes.

Details on the usage of each function are described as follows.

1) User Setting Manager
   This function is used to change default settings of the printer, including code pages, serial settings, paper size, and print density, to values suited to the user environment.

2) Configure Print Quality
   This function is used to configure optimal printing quality. Sample labels are printed out with various settings for reference.

3) Manual Calibration
   This function is used to calibrate meida sensor manually.

4) PCX File Downloader
   This function is used when saving a black-and-white PCX-format image to flash memory.

5) File transfer
   This function is used when sending test files, such as command scripts, to the printer.

6) Printer Tools
   This function is used to check various information of printer and execute various printer mode.

7) Communication Window
   This function is used to test printing-related commands and create a brief label sample for test printing. This function is also used to read data response from printer.

8) SLCS Test Tool
   This function is used to test printing-related commands of the SLCS and create a brief label sample for test printing.

We at Oki Data maintain ongoing efforts to enhance and upgrade the functions and quality of all our products. In following, product specifications and/or user manual content may be changed without prior notice.

2. Operating System Environment

Unified Label Utility-II run on any of the following operating systems.

Microsoft Windows 2000 (32bit)
Microsoft Windows XP (32bit/64bit)
Microsoft Windows Server 2003 (32bit/64bit)
Microsoft Windows Vista (32bit/64bit)
Microsoft Windows Server 2008 (32bit/64bit)
Microsoft Windows Server 2008R2 (64bit)
Microsoft Windows 7 (32bit/64bit)
Microsoft Windows 8 (32bit/64bit)
Microsoft Windows Server 2012 (64bit)

3. Usage Preparation

1) Printer and PC Connection.

Connect the printer and PC via the interface cable.
(The interfaces available for usage are Serial, Parallel, USB and Ethernet.)

2) Unified Label Utility-II Program Execution.

The program can be installed from the accompanying CD

3) Select the interface type and communication conditions.

4) Click on the “Connect Button”, If the conection is successful, The inactive buttons becaom active with the message “Success open port”. If the connection fails, the following error message appears. “Cannot open port! Please check printer and cable”.

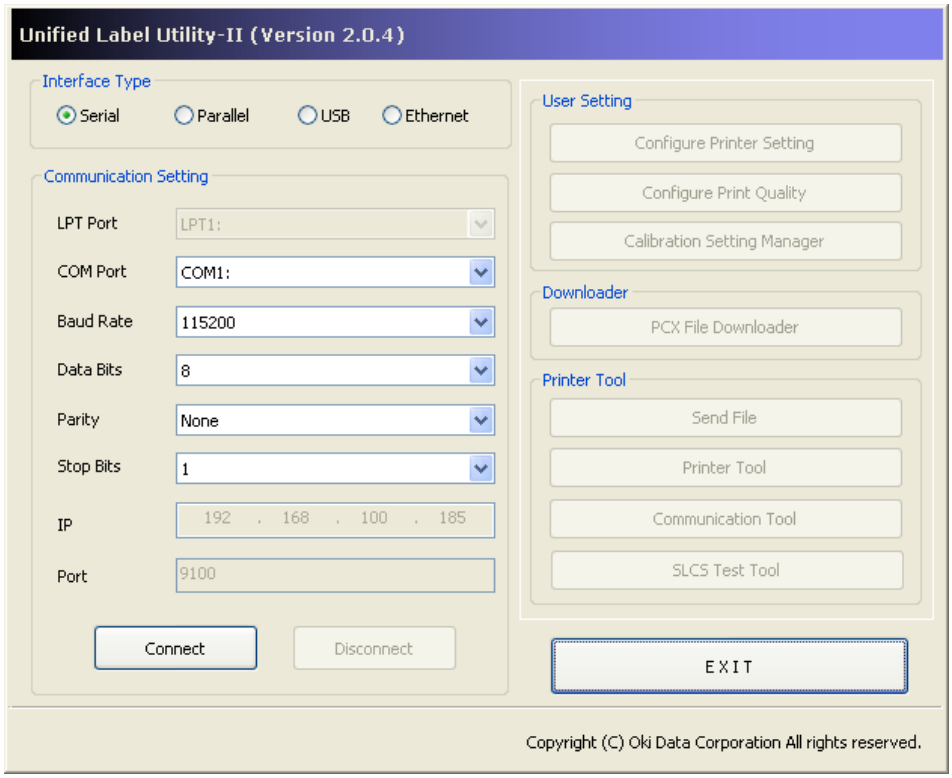

4. Unified Label Utility-II Usage

4-1 User Setting Manager

This function is used to change default settings of the printer, including code pages, serial settings, paper size, and print density, to values suited to the user environment.

Click the “Configure Printer Setting”.

4-1-1 Serial Communication Setting

1) Click the “Serial”.

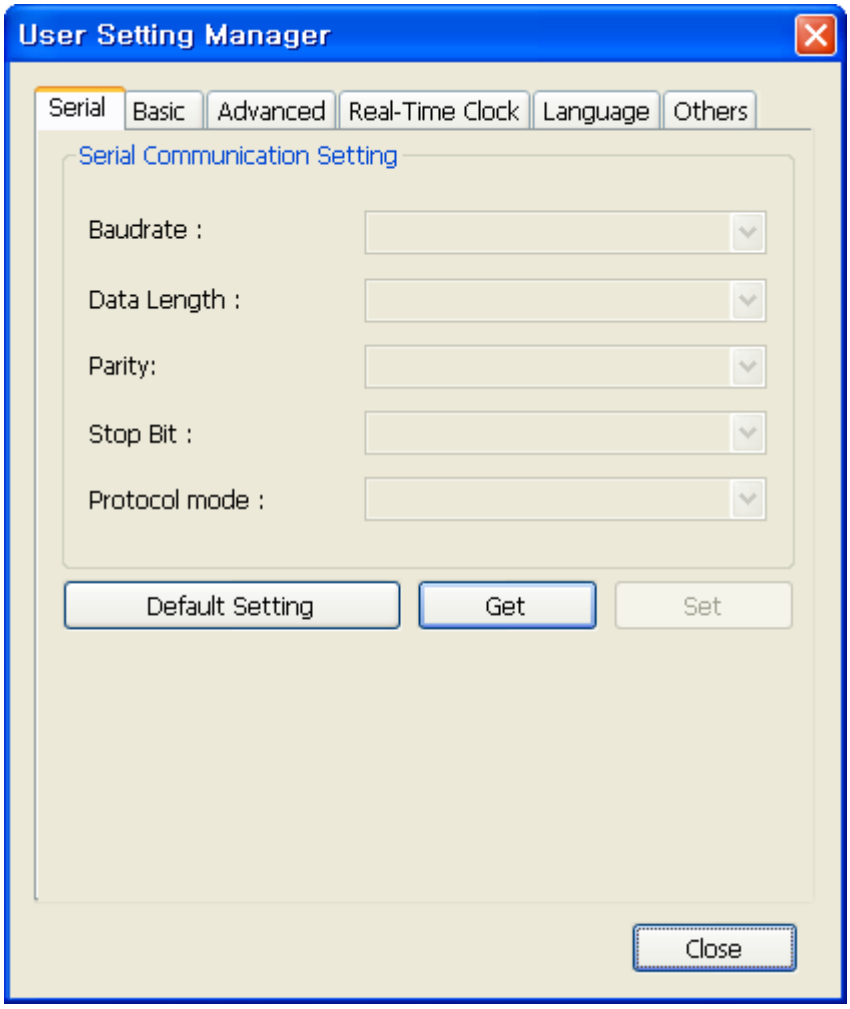

2) Click the “Get” button to read the printer setting value.

3) After modifying setting values, click the “Set” button to store the changed settings.

4) Click the “Default Setting” button followed by the “Set” button to set each item to its default value.

4-1-2 Basic Setting

1) Click the “Basic” Tab to configure speed, darkness and Media options.

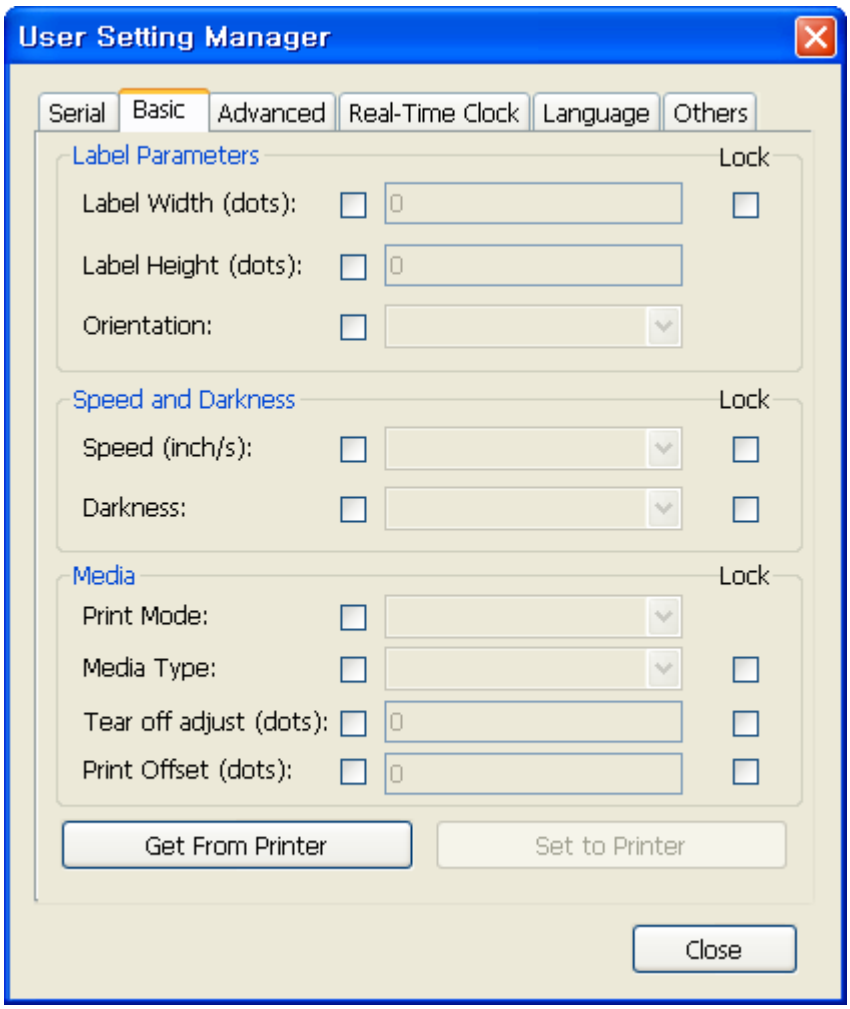

2) Click the “Get” button to read the printer setting value.

3) Modify each value.

4) If you want to lock the setting value check the lock checkbox.

5) Click the “Set to Printer” to apply changed values to printer.

4-1-3 Advanced Settings

1) Click the “Advanced” tab to configure Meida handling process options.

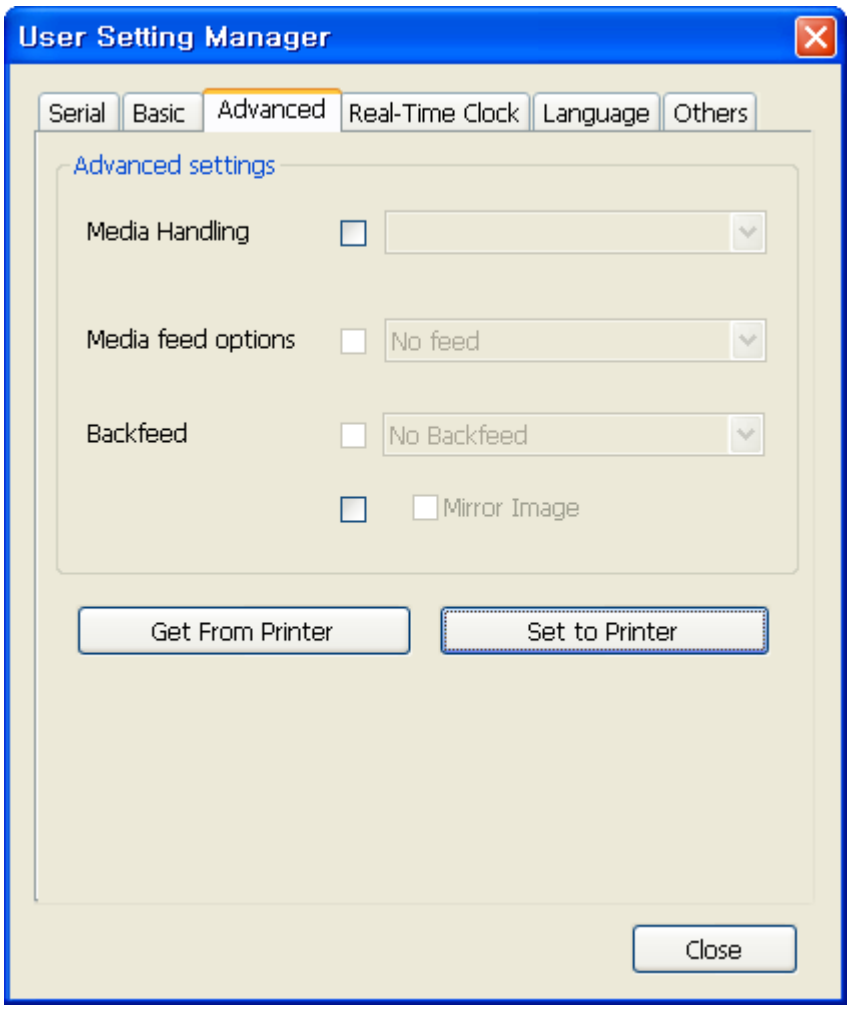

2) Click the “Get” button to read the printer setting value.

3) Modify each value.

4) Click the “Set to Printer” to apply changed values to printer.

4-1-4 Real-time Clock

1) Click the “Real-time Clock” tab to set Real-Time Clock.

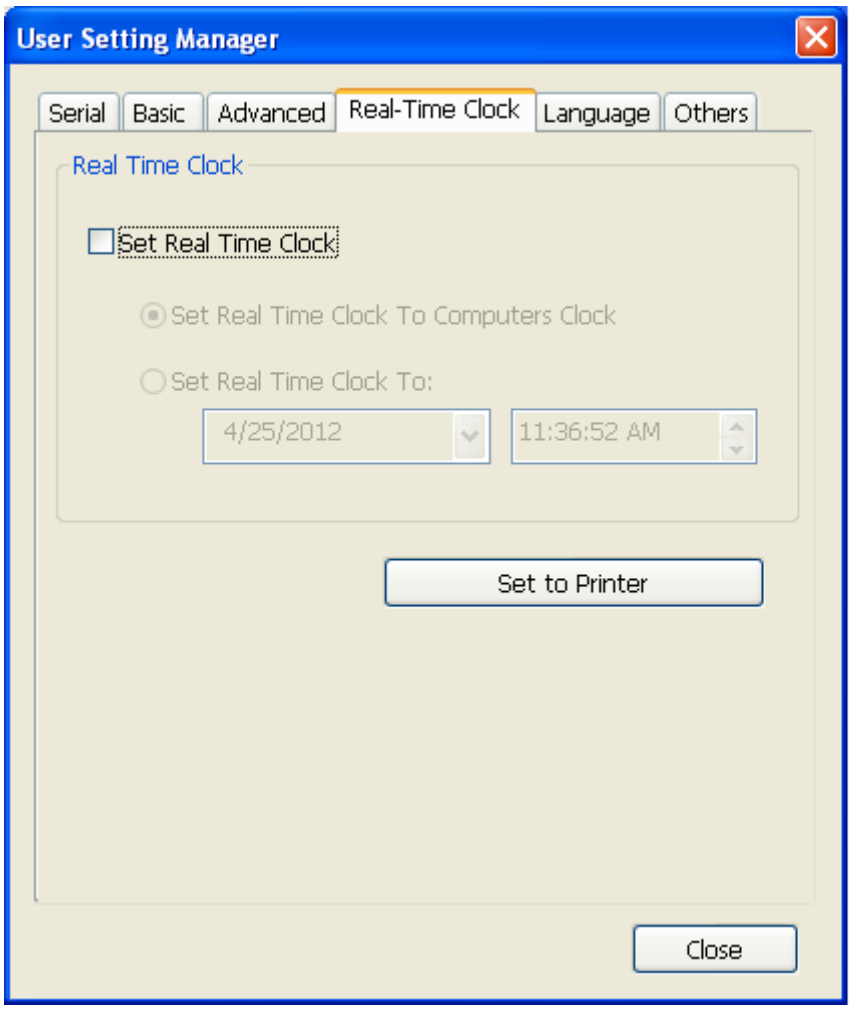

2) Configure the clocks and click the “Set to Printer” to apply to printer.

4-1-5 Language

1) Click the “Language” tab to set Default Codepage, Default International Character set.

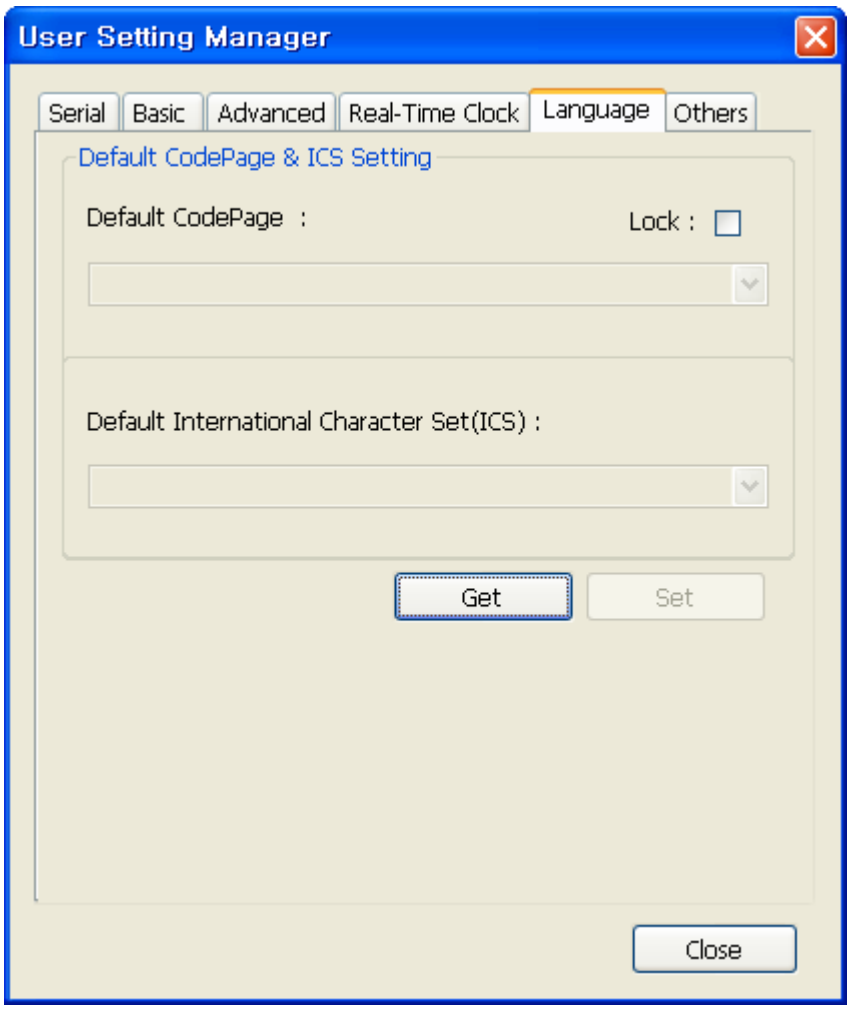

2) Click the “Get” button to read the printer setting value.

3) Modify each value.

4) Click the “Set”button to apply changed values to printer.

4-1-6 Others

1) Click the “Others” tab to set printer information, initialize Motor, TPH, Cutter statistic and set USB serial number.

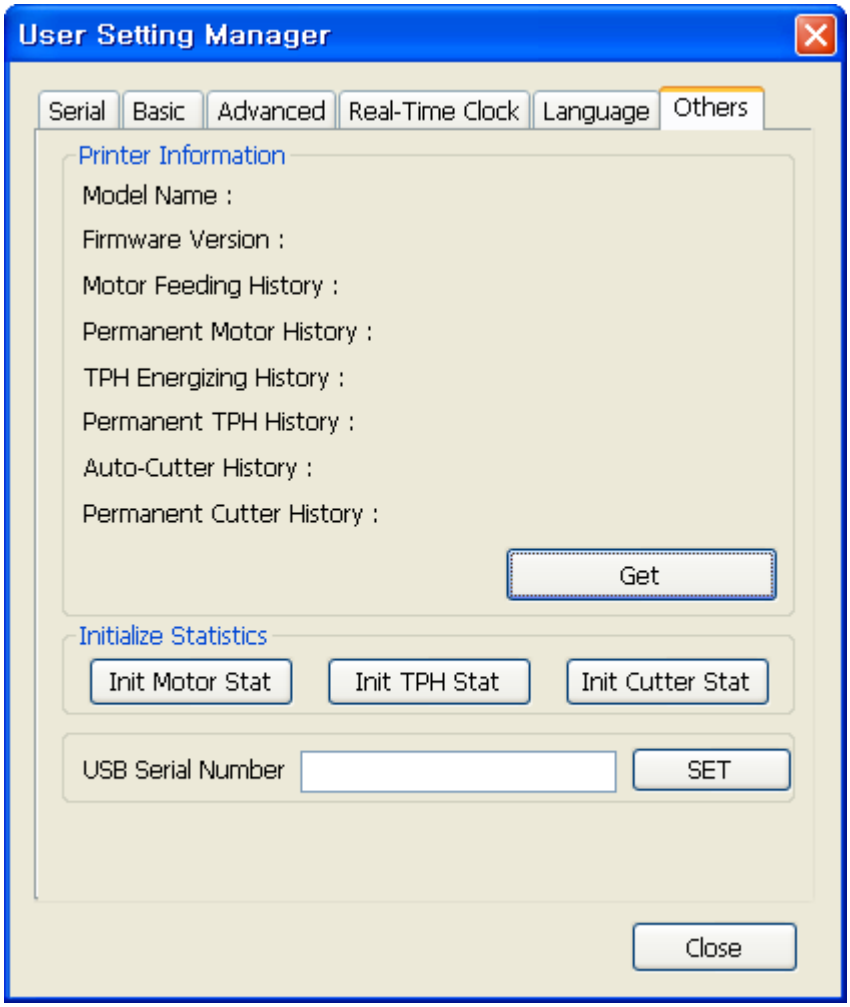

2) Click the “Get” button to read the printer information value.

3) Click the “Init Motor Stat”, “Init TPH Stat”, “Init Cutter Stat” to initialize each value.

4) Input 13 decimal number and click the “Set” button to set USB serial number.

4-2 Configure Print Quality

This function is to configure optimal printing quality. Print reference labels with various settings to find the optimal setting.

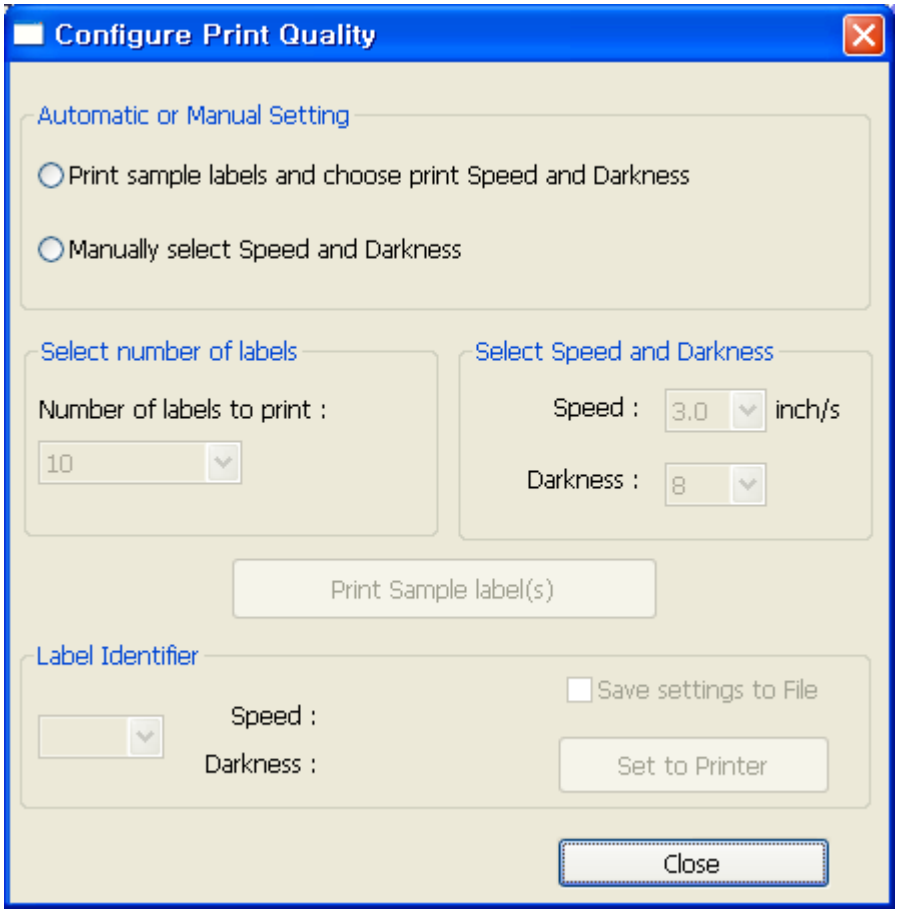

- Print Sample labels and choose print Speed and Darkness

1) “Select number of labels” means the number of refenece labels with different settings.

2) Click the “Print Sample label(s)” button to start printing refenece labels which have specific identitier.

3) Choose Label identifier of the label with best printng quality among the printed labels.

4) Click the “Set to Printer” button to apply to printer.

- Manually select Speed and Darkness

1) Choose speed and darkness manually.

2) Click “Print Sample label(s)” button to print label with the selected values.

3) After fiding optimal value, Click the “Set to Printer” button to apply to printer.

4-3 Manual Calibration

Manual-calibration of media detection can be used when the printer cannot detect a media gap (or black mark) even after auto-calibration has been executed.

Users can calibrate sensor parameters in detail.

Please make sure the printer is connected and execute the utility program.
Press the Calibration Setting Manager Button after setting the interface type.

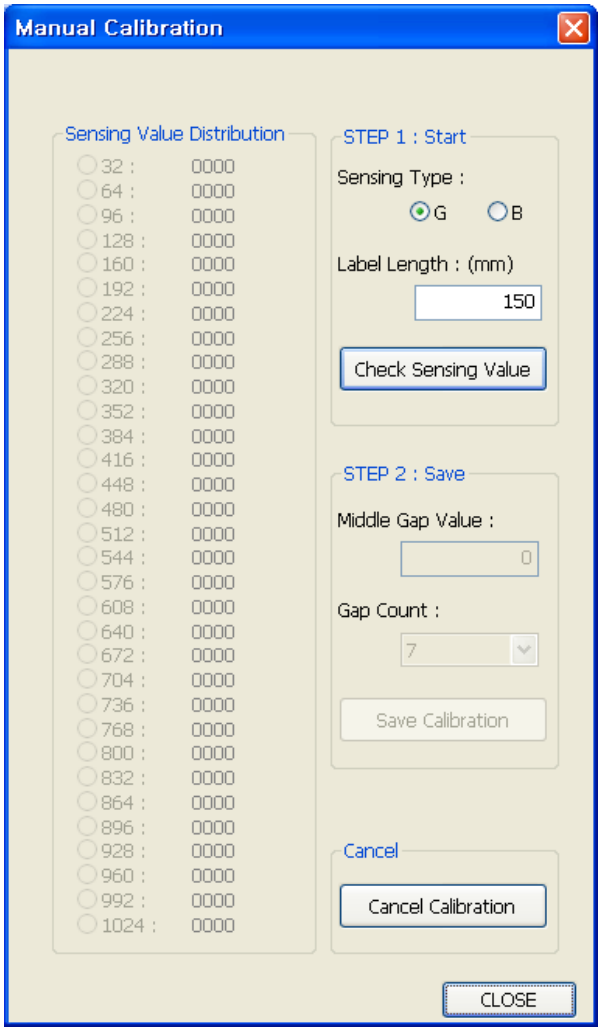

1) Select the sensing type and input the label length by millimeter and click on “Check Sensing Value” tap. Then printer starts to calibrate.

2) After scanning the paper, the scanned values are displayed on the utility.

3) Optimal sensing values will appear in black bold letters on the left of the utility screen and select one of the values and click on “Save Calibration”.

4) If chosen value does not work properly, please try the other values among the black bold letters.

5) To go back to the initial value, please click on “Cancel Calibration”.

4-4 PCX File Downloader

This function is used when saving a black-and-white PCX-format image to flash memory.

Saved images can be recalled at any time for printing.

PCX File Downloader usage is described as follows.

The image file must be prepared prior to using this function.

Click the “PCX File Downloader” button.

4-4-1 Image Store (IS)

1) Open the PCX file (*.pcx).
2) Enter the image name and click the Download button. The image name is used to recall or delete images

4-4-2 Image Delete (ID)

1) Check the list of stored images by clicking the Image Information button.
2) Enter the name of the image to be deleted and click the Delete Image button.
3) To delete all images stored in the printer memory, click the Delete All Images button without entering an image name.

4-4-3 Image Information (II)

Information for the saved image is displayed.

4-4-4 Image Recall (IR)

Downloaded images can be recalled and printed using the IR command.

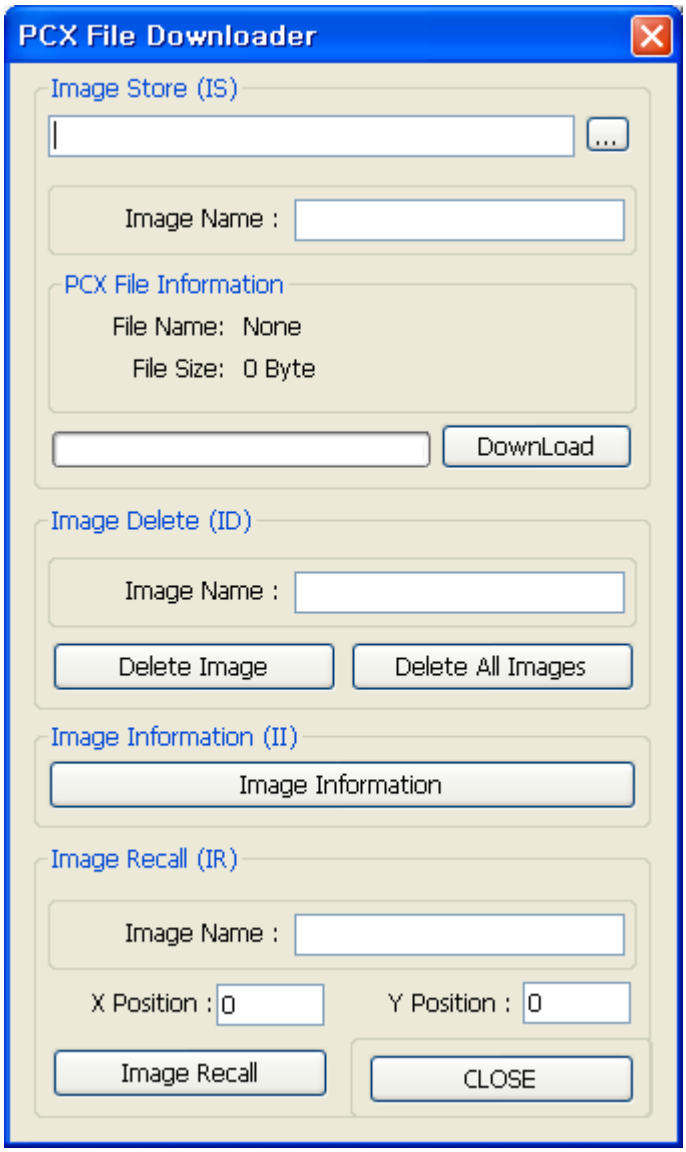
PCX File Downloader
Image Store (IS)
...
Image Name :
PCX File Information
File Name: None
File Size: 0 Byte
DownLoad
Image Delete (ID)
Image Name :
Delete Image
Delete All Images
Image Information (II)
Image Information
Image Recall (IR)
Image Name :
X Position : 0
Y Position : 0
Image Recall
CLOSE

4-5 File Transfer

This function is used when sending test files, such as command scripts, to the printer.

1) Click “Send File” button on the main window.

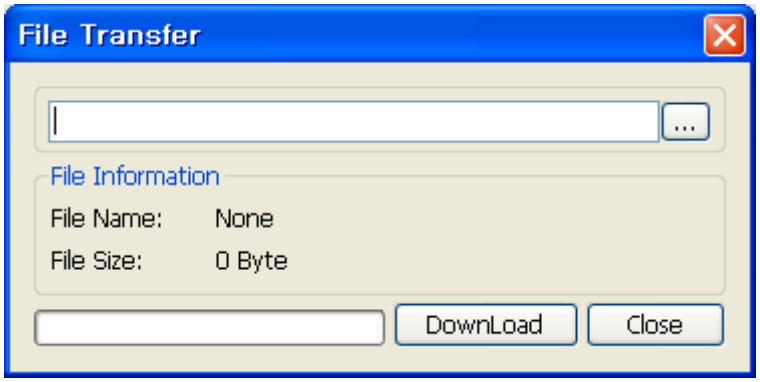

2) Select the file to be sent and click the “Download” button to send the file to the printer.

4-6 Printer Tools

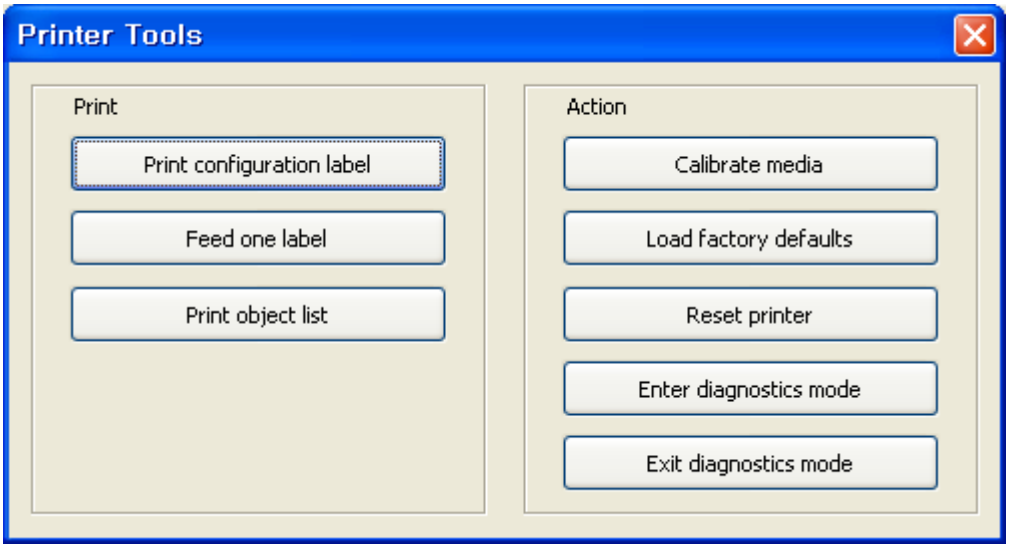

- Print configuration label: To print out printer's configuration infomation.

- Feed one label: To feed one blank label.

- Print object list: To printout the fonts list and memory informations.

- Calibration media: To execute auto-calibration to calibrate media sensor.

- Load factory defaults: To set printer's default configuration as factory's initial setting.

- Reset printer: Reboot printer.

- Enter diagnostics mode: To make printer enters into Diagnostic Mode(data dump mode). In this mode, printer prints out all received data with hex decimal format.

- Exit diagnostic mode: To exit Diagnostic Mode and return to normal mode.

4-7 Communication Window

This function is used to test commands or create sample labels. Type the command script in the edit window or open the saved command script. Responsed data from printer can be read with this program.

1) Click the “Communication Tool” on the main window to start this function.

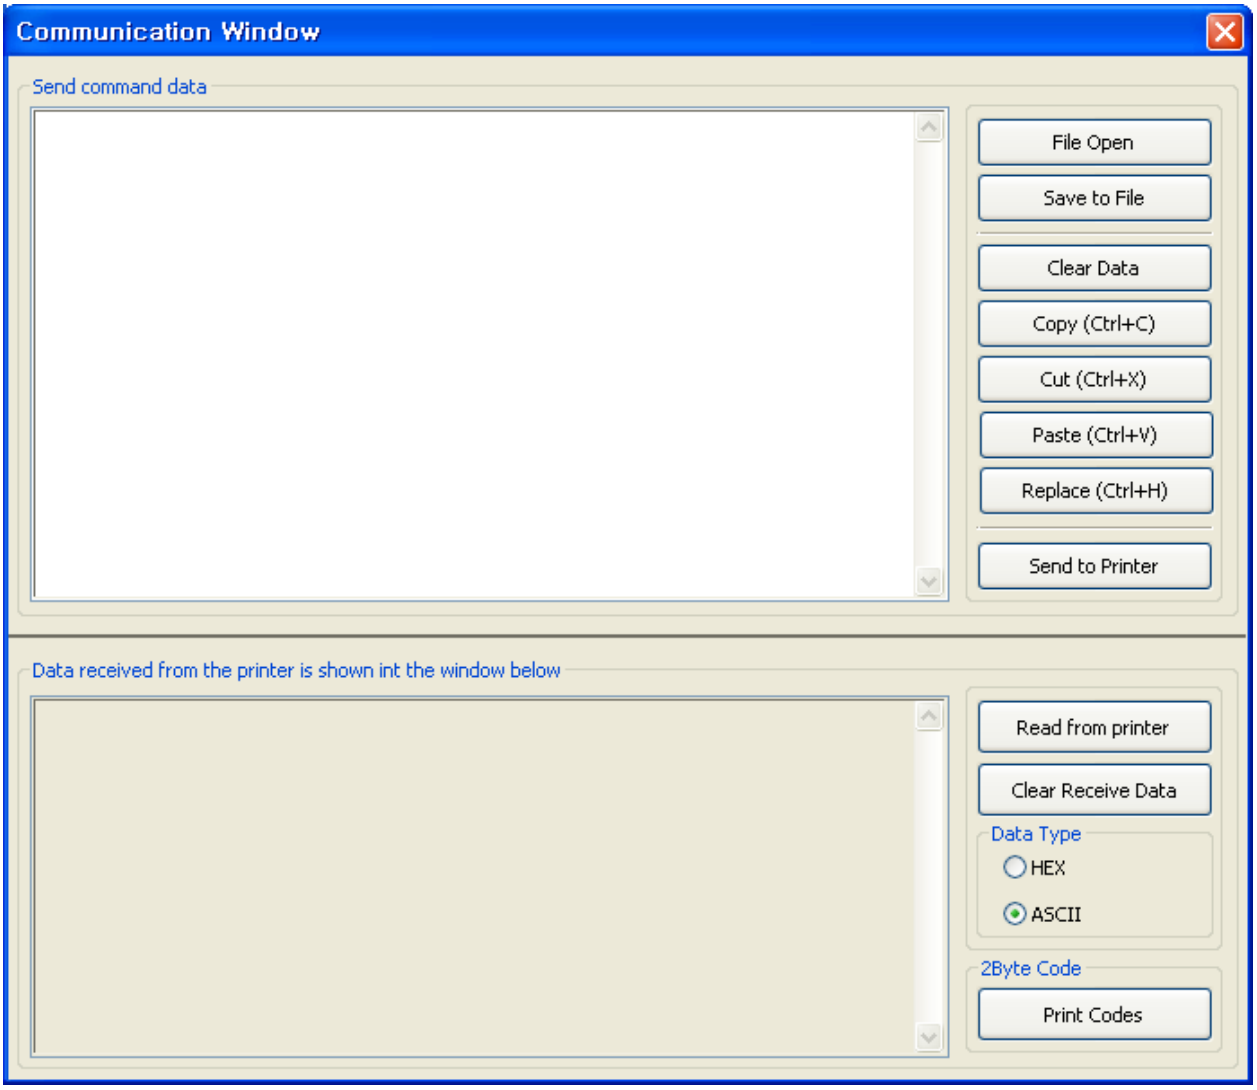

2) Type the command lines direclty or open the save command script file.

3) Click the “Send to Printer” button to send data to printer.

4) If the command which request response from printer to host is used, “Read from Printer” can be used to see responsed data from printer.

5) “Clear Receive Data” button is used to make the received data windows clean.

6) Click the “Print Codes” button to print two bytes codepage.

4-8 SLCS Test Tool

This function is used to test printing-related commands of the SLCS and create a brief label sample for test printing.

1) Click the “SLCS Test Tool” button.

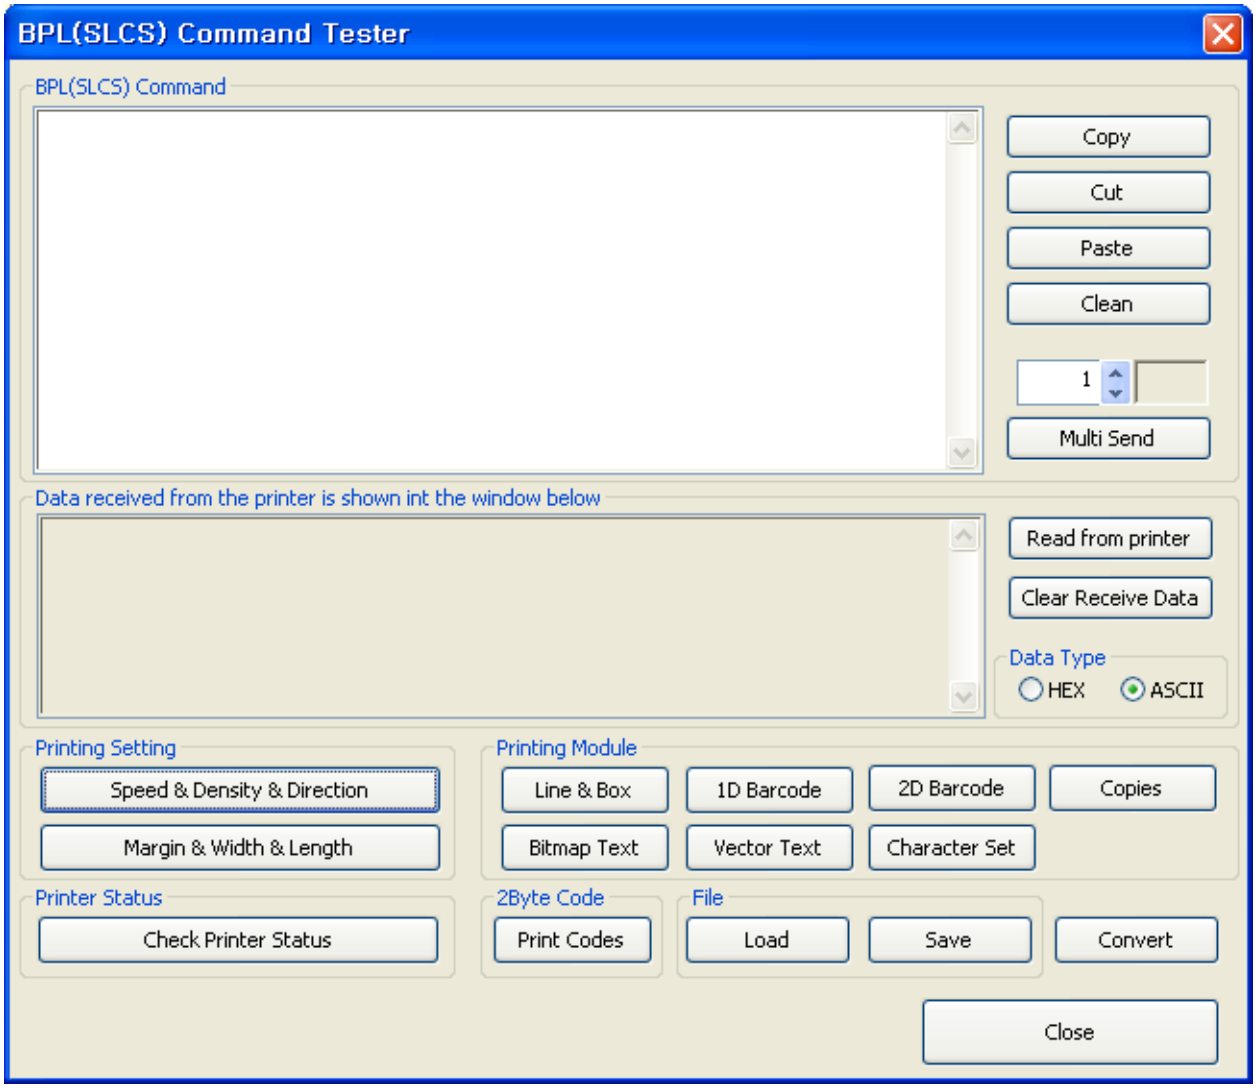

2) Click the “Multi Send” button to send data to printer.

3) If the command which request response from printer to host is used, “Read from Printer” can be used to see responsed data from printer.

4) “Clear Receive Data” button is used to make the received data windows clean.

5) The function of each button is described as follows
   a) Line & Box: creates a command for line and box drawing
   b) 1D Barcode: creates a command for a 1-dimensional barcode
   c) 2D Barcode: creates a command for a 2-dimensional barcode
   d) Copies: printing counts
   e) Bitmap Text: creates a command for bitmap image string recognition
   f) Vector Text: creates a command for vector image string recognition
   g) Character Set: creates a command for code page and ICS setting
   h) Speed & Density & Direction: creates a command for speed, print density, and print direction setting
   i) Margin & Width & Length: creates a command for margin and width and length of print paper setting
   j) Check Printer Status: check cover, paper, and error status of printer
   k) SLCS Command Edit: function for command cutting, copying, pasting, and erasing
   l) Print Codes: print 2byte codes
   m) Load: recalls a file with a saved command
   n) Save: saves a created command to a file
   o) Convert: converts measurement units (inch, mm, cm)
   p) Close: closes the SLCS test program

Oki contact details

Oki Systems (UK) Ltd
Blays House
Wick Road
Egham
Surrey
TW20 0HJ

Tel:+44 (0) 1784 274300
Fax:+44 (0) 1784 274301
http://www.oki.co.uk

Oki Systems Ireland Limited
The Square Industrial Complex
Tallaght
Dublin 24

Tel:+353 (0) 1 4049590
Fax:+353 (0)1 4049591
http://www.oki.ie

Oki Systems Ireland Limited - Northern Ireland
19 Ferndale Avenue
Glengormley
BT36 5AL
Northern Ireland

Tel:+44 (0) 7767 271447
Fax:+44 (0) 1 404 9520
http://www.oki.ie

Technical Support for all Ireland:
Tel:+353 1 4049570
Fax:+353 1 4049555
E-mail: tech.support@oki.ie

OKI Systems (Czech and Slovak), s.r.o.
IBC – Pobřežní 3
186 00 Praha 8
Czech Republic

Tel: +420 224 890158
Fax:+420 22 232 6621
Website: www.oki.cz, www.oki.sk

Oki Systems (Deutschland) GmbH
Hansaallee 187
40549 Düsseldorf

Tel: 01805/6544357**
01805/OKIHELP**
Fax: +49 (0) 211 59 33 45
Website:
www.okiprintingsolutions.de
info@oki.de

**0,14€/Minute aus dem dt. Festnetz der T-Com (Stand 11.2008)

Διανομέας των συστημάτων OKI
CPI S.A1 Rafailidou str.
177 78 Tavros
Athens
Greece

Tel: +30 210 48 05 800
Fax:+30 210 48 05 801
EMail:sales@cpi.gr

Oki Systems (Iberica), S.A.U
C/Teide, 3
San Sebastian de los Reyes
28703, Madrid

Tel:+34 91 3431620
Fax: +34 91-3431624
Atención al cliente: 902 36 00 36
Website: www.oki.es

Oki Systèmes (France) S.A.
44-50 Av. du Général de Gaulle
94246 L'Hay les Roses
Paris

Tel:+33 01 46 15 80 00
Télécopie:+33 01 46 15 80 60
Website: www.oki.fr

OKI Systems (Magyarország) Kft.
Capital Square
Tower 2
7th Floor
H-1133 Budapest,
Váci út 76
Hungary

Telefon: +36 1 814 8000
Telefax: +36 1 814 8009
Website: www.okihu.hu

OKI Systems (Italia) S.p.A.
via Milano, 11,
20084 Lacchiarella (MI)

Tel:+39 (0) 2 900261
Fax:+39 (0) 2 90026344
Website: www.oki.it

OKI Printing Solutions
Platinium Business Park II, 3rd Floor
ul. Domaniewska 42
02-672 Warsaw
Poland

Tel:+48 22 448 65 00
Fax:+48 22 448 65 01
Website: www.oki.com.pl
E-mail: oki@oki.com.pl
Hotline: 0800 120066
E-mail: tech@oki.com.pl

Oki Systems (Ibérica) S.A.
Sucursal Portugal
Edifício Prime -
Av. Quinta Grande 53
7º C Alfragide
2614-521 Amadora
Portugal

Tel:+351 21 470 4200
Fax:+351 21 470 4201
Website:www.oki.pt
E-mail : oki@oki.pt

Oki Service
Serviço de apoio técnico ao Cliente
Tel: 808 200 197
E-mail : okiserv@oki.pt

OKI Europe Ltd. (Russia)
Office 702, Bldg 1
Zagorodnoye shosse
117152, Moscow

Tel: +74 095 258 6065
Fax: +74 095 258 6070
e-mail: info@oki.ru
Website: www.oki.ru

Technical support:
Tel: +7 495 564 8421
e-mail: tech@oki.ru

Oki Systems (Österreich)
Campus 21
Businesszentrum Wien Sued
Liebermannstrasse A02 603
22345 Brun am Gebirge

Tel: +43 223 6677 110
Drucker Support:
+43 (0) 2236 677110-501
Fax Support:
+43 (0) 2236 677110-502
Website: www.oki.at

OKI Europe Ltd. (Ukraine)
Raisy Opkinoy Street,8
Building B, 2nd Floor,
Kiev 02002
Ukraine

Tel: +380 44 537 5288
e-mail: info@oki.ua
Website: www.oki.ua

OKI Sistem ve Yazıcı Çözümleri Tic. Ltd. Şti.
Harman sok Duran Is Merkezi,
No:4, Kat:6,
34394, Levent
İstanbul

Tel: +90 212 279 2393
Faks: +90 212 279 2366
Web: www.oki.com.tr
www.okiprintingsolutions.com.tr

Oki Systems (Belgium)
Medialaan 24
1800 Vilvoorde

Helpdesk: 02-2574620
Fax: 02 2531848
Website: www.oki.be

AlphaLink Bulgaria Ltd.
2 Kukush Str.
Building "Antim Tower", fl. 6
1463 Sofia, Bulgaria

tel: +359 2 821 1160
fax: +359 2 821 1193
Website: http://bulgaria.oki.com

OKI Printing Solutions
Herstedøstervej 27
2620 Albertslund
Danmark

Adm.: +45 43 66 65 00
Hotline: +45 43 66 65 40
Salg: +45 43 66 65 30
Fax: +45 43 66 65 90
Website: www.oki.dk

Oki Systems (Finland) Oy
Polaris Capella
Vänrikinkuja 3
02600 Espoo

Tel: +358 (0) 207 900 800
Fax: +358 (0) 207 900 809
Website: www.oki.fi

Oki Systems (Holland) b.v.
Neptunustraat 27-29
2132 JA Hoofddorp

Helpdesk: 0800 5667654
Tel:+31 (0) 23 55 63 740
Fax:+31 (0) 23 55 63 750
Website: www.oki.nl

Oki Systems (Norway) AS
Tevlingveien 23
N-1081 Oslo

Tel:+47 (0) 63 89 36 00
Telefax:+47 (0) 63 89 36 01
Ordrefax:+47 (0) 63 89 36 02
Website: www.oki.no

General Systems S.R.L. (Romania)
Sos. Bucuresti-Ploiesti Nr. 135.
Bucharest 1
Romania

Tel: +40 21 303 3138
Fax: +40 21303 3150
Website: http://romania.oki.com

Var vänlig kontakta din Återförsäljare i första hand, för konsultation. I andra hand kontakta

Oki Systems (Sweden) AB
Borgafjordsgatan 7
Box 1191
164 26 Kista

Tel. +46 (0) 8 634 37 00
e-mail:
info@oki.se för allmänna frågor om Oki produkter

support@oki.se för teknisk support gällandes Oki produkter

Vardagar: 08.30 - 12.00,
13.00 - 16.00
Website: www.oki.se

Oki Systems (Schweiz)
Baslerstrasse 15
CH-4310 Rheinfelden

Support deutsch +41 61 827 94 81
Support français +41 61 827 94 82
Support italiano +41 061 827 9473
Tel: +41 61 827 9494
Website: www.oki.ch

Oki Data Americas Inc.(United States • États-Unis)
2000 Bishops Gate Blvd.
Mt. Laurel, NJ 08054
USA

Tel: 1-800-654-3282
Fax: 1-856-222-5247
http://WWW.OKIPRINTINGSOLUTIONS.COM
http://my.okidata.com

Oki Data Americas Inc.(Canada • Canadá)
4140 B Sladeview Crescent Units 7&8
Mississauga, Ontario
Canada L5L 6A1

Tél: 1-905-608-5000
Téléc: 1-905-608-5040
http://WWW.OKIPRINTINGSOLUTIONS.COM

Oki Data Americas Inc.(América Latina (OTRO))
2000 Bishops Gate Blvd.
Mt. Laurel, NJ 08054
USA

Tel (Español): 1-856-222-7496
1-856-222-5276
Fax: 1-856-222-5260
Email: LASatisfaction@okidata.com

Oki Data de Mexico, S.A. de C.V.
Mariano Escobedo #748, Piso 8
Col. Nueva Anzures
C.P. 11590, México, D.F.

Tel: 52-555-263-8780
Fax: 52-555-250-3501
http://WWW.OKIPRINTINGSOLUTIONS.COM

Oki Data do Brasil, Ltda.
Rua Avenida Alfrefo Egidio de souza Aranha
100-4° andar-Bloco C Chacara Santo Antonio
Sao Paulo, Brazil 04726-170

Tel: 55-11-3444-6747 (Grande São Paulo)
0800-11-5577 (Demais localidades)
Fax: 5511-3444-3501
e-mail: okiserv@okidata.com.br
http://WWW.OKIPRINTINGSOLUTIONS.COM

Oki Data (Singapore) Pte. Ltd.
438A Alexandra Road #02-11/12,
Lobby 3, Alexandra Technopark
Singapore(119967)

Tel:(65) 6221 3722
Fax:(65) 6594 0609
http://www.okidata.com.sg

Oki Systems (Thailand) Ltd.
1168/81-82 Lumpini Tower,
27th Floor Rama IV Road
Tungmahamek, Sathorn
Bangkok 10120

Tel:(662) 679 9235
Fax:(662) 679 9243/245
http://www.okisysthai.com

Oki Systems (Hong Kong) Ltd.
Suite 1908, 19/F, Tower 3,
China Hong Kong City
33 Canton Road, TsimShaTsui,
Kowloon, Hong Kong

Tel: (852) 3543 9288
Fax: (852) 3549 6040
http://www.okiprintingsolutions.com.hk

Oki Data(Australia) Pty Ltd.
Levwl1 67 Epping Road, Macquarie Park
NSW 2113, Australia

Tel: +61 2 8071 0000
(Support Tel: 1800 807 472)
Fax: +61 2 8071 0010
http://www.oki.com.au

Comworth Systems Ltd.
8 Antares Place Mairangi Bay,
Auckland, New Zealand

Tel:(64) 9 477 0500
Fax:(64) 9 477 0549
http://www.comworth.co.nz

Oki Data(S) P Ltd. Malaysia Rep Office
Suite 21.03, 21st Floor Menara IGB,
Mid Valley City,
Lingkaran Syed Pura 59200,
Kuala Lumpur, Malaysia

Tel: (60) 3 2287 1177
Fax: (60) 3 2287 1166

Oki Data Corporation
4-11-22 Shibaura, Minato-ku,Tokyo
108-8551, Japan

www.okiprintingsolutions.com